User Guide

Floor Mounted Service Brake

907P





www.guidosimplex.it

Dear Customer,

Thank you for having purchased a Guidosimplex device,

As with all of our products, this device, was designed and created respecting the highest possible levels of quality and safety standards.

All Guidosimplex products are manufactured from the best materials available on today's market, this means that when you buy a Guidosimplex product you buy quality and reliability, which results in less maintenance.

Guidosimplex products coexist in perfect harmony in parallel with the original commands and design of the vehicle and conventional driving can be restored on command.

This device is capable of fulfilling all needs as per design as long as a correct usage is performed.

Therefore we advise you to consult the below reported user guide prior to using the device.

FLOOR MOUNTED SERVICE BRAKE


The installation of this device is performed directly onto the anchor points of the driver's seat , eliminating any encumbrance with the steering wheel that may hinder the regulation of the device.

Braking

The level of braking achieved complies to the amount of force applied , increase pressure applied means to increase braking , less pressure results in a more gradual braking effect.

CAUTION. When adjusting the forward position of the seat, ensure that there is enough available space to brake correctly and to reassume a neutral position



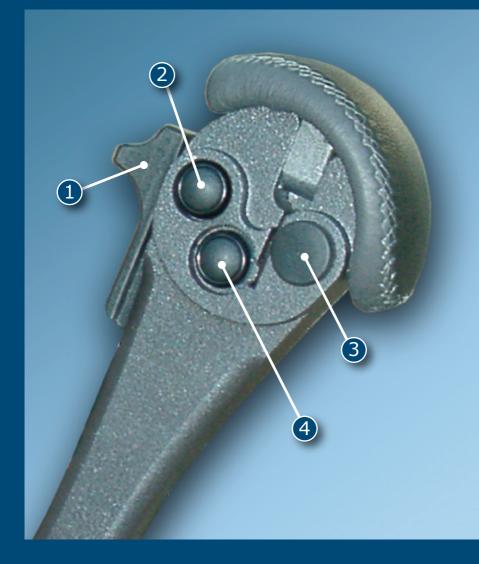

DEVICE FEATURES - FUNCTIONS

1 Inserting the manual service brake lock:

Push the lever forward to the limit and simultaneously push the manual service brake lock button, continue to apply pressure on the service brake button, ease the pressure applied on the lever

Releasing the manual service brake lock:
Push the lever forward to the limit

- 2 Horn
- 3 Extra option button
- 4 Kick-down (this option is only available when installed in conjunction with a manually operated accelerator)

In the case of a vehicle with an automatic transmission when the kick-down button is pressed acceleration is increased

WARNING: WHENEVER THE CAR IS PARKED
THE MANUAL SERVICE BRAKE LOCK
SHOULD NEVER BE USED TO REPLACE THE
ORIGINAL PARKING BRAKE.



In the case of malfunctioning or any other problem related to the device in question please contact the nearest authorised Guidosimplex Dealer.

www.guidosimplex.it

This user guide was printed by Guidosimplex S.r.l. and cannot be considered a valid warranty document.

Guidosimplex reserves the right to update without notice the document in question.

Reserved Copyrights. Guidosimplex S.r.l.



Guidosimplex S.r.l.
Via del Podere San Giusto, 29
00166 Roma
Tel. 06 6152801 r.a.
Fax 06 61528036
infoclient@guidosimplex.it

www.guidosimplex.it